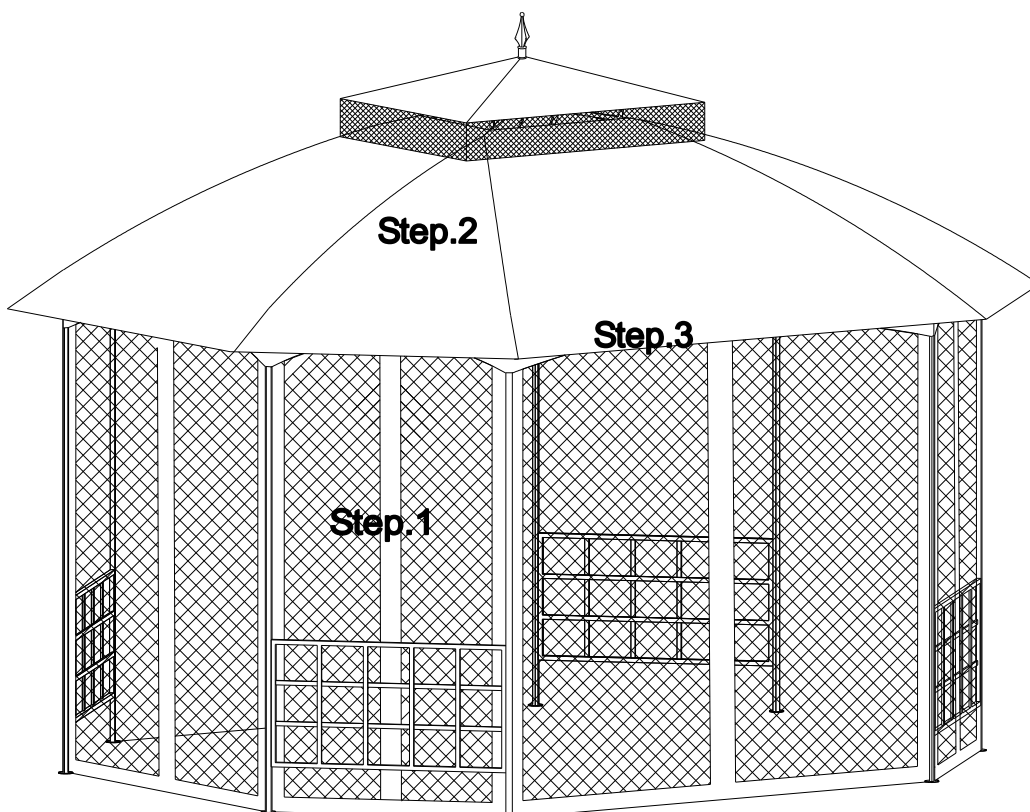
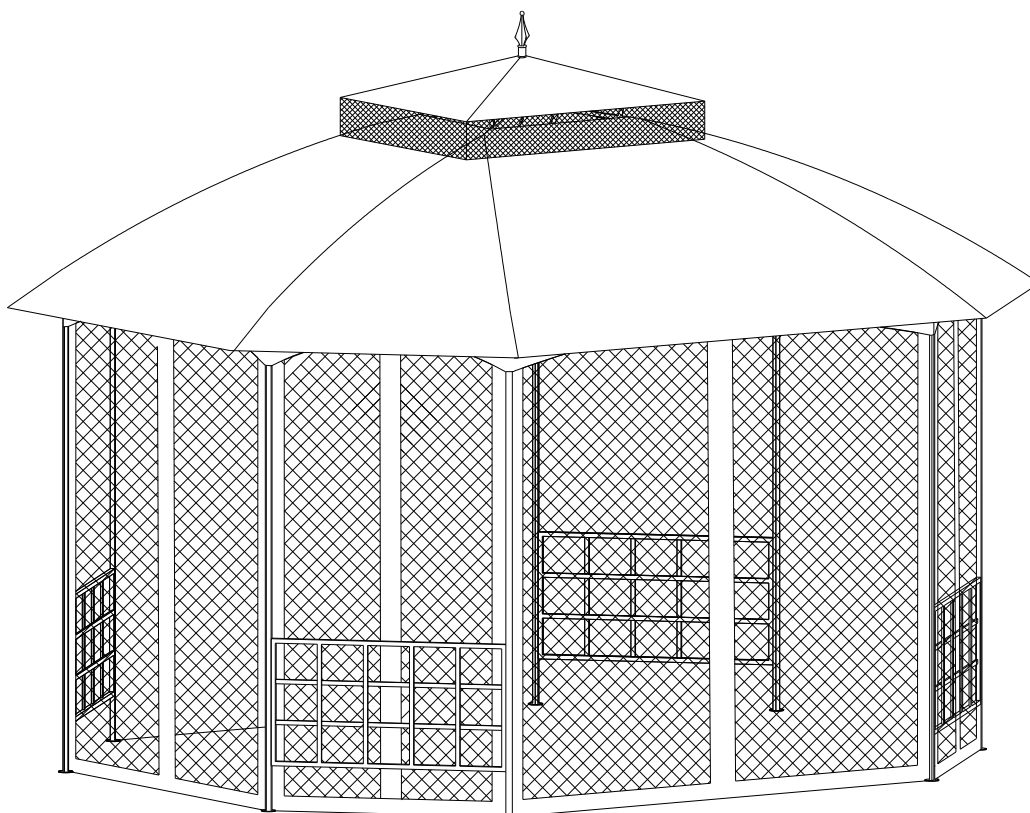


Assembly Instructions

Item: L-GZ660PST




 

 



 







 


IMPORTANT:

 


 
Please read and follow all safety statements, warnings, assembly instructions, use & care directions before attempting to assemble.

1. When installing and assembling your gazebo, it is recommended that 4 or more adults are involved. It takes one or two hours to assemble the gazebo.
2. Do not use the unit during an electrical storm, as there is a remote chance of getting struck by lightening.
3. Do not climb on top of the gazebo. Falling off the gazebo can result in serious injury, possibly even death.
4. Do not leave the gazebo assembled when there is a risk of high wind, as possible damage will occur to the structure.
5. Never barbecue under this gazebo or use lanterns that contain naked flames.
6. This package contains small items and plastic bags that should be kept away from children.
7. Ensure that all connectors & poles are firmly secured in position fully. It is important to do so before use so as to avoid collapsing or damage to the item, which could result in injury.
8. WARNING: Keep all flame and heat sources away from this tent fabric. This tent is made with fabric that meets CPAI – 84 specifications for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the Flame-resistant properties ineffective.
9. WARNING: Please take down the gazebo during strong wind. The manufacturer or retailer is not liable for any loss of the product or other items due to the failure to take down the gazebo during strong wind.

Parts List

Small top connector	A1	1	
Big top connector	A2	1	
Finial	B1	1	
Hook	B2	1	
Side top connector 1	C1	4	
Side top connector 2	C2	4	
Long side pole 1	D	4	
Short side pole 2	E	4	
Corner connector	E1	8	
Arch bar 1	F	4	
Arch bar 2	G	2	
Arch bar 3	H	2	
Pole 1	I	4	
Pole 2	J	4	
Screen	K	4	
Small canopy	L	1	
Large canopy	M	1	
Mosquito netting	N	1	

Hardware Pack 1

AA	M5*15 Bolt	32 PCS	
BB	M5 Washer	48 PCS	
CC	M5*35 Bolt	16 PCS	
W	M5 Wrench	1 PCS	

Step.1

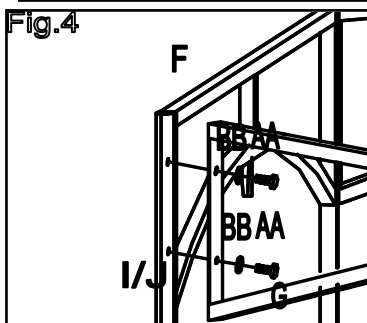
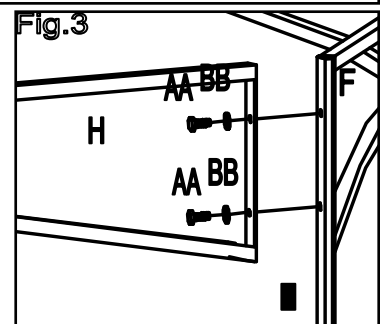
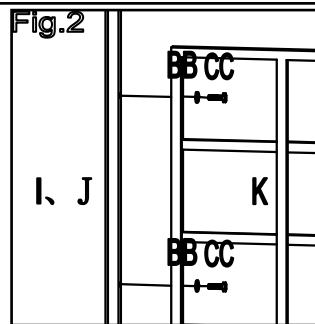
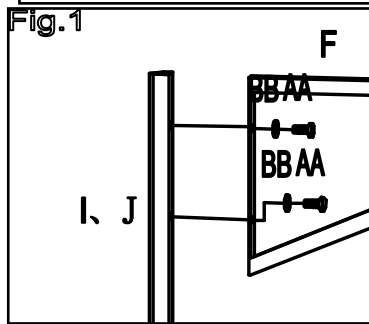
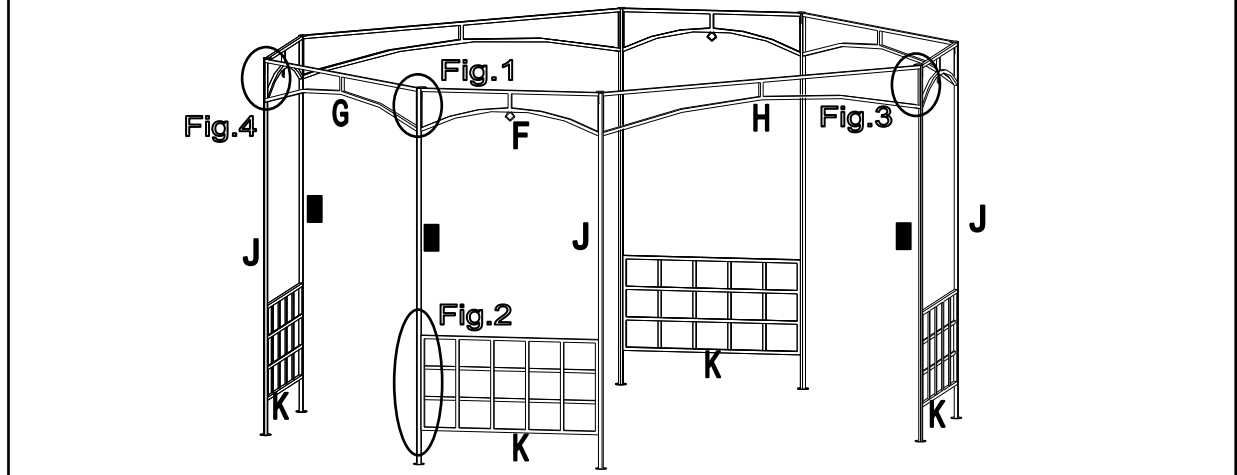


Fig.1: Attach Arch bar 1 (F) to Pole 1 (I) & Pole 2 (J) by M5*15 Bolt (AA) and M5 Washer (BB).

Fig.2: Attach Screen (K) to Pole 1 (I) & Pole 2 (J) by M5*35 Bolt (CC) and M5 Washer (BB).

Fig.3: Attach Arch bar 3 (H) to Pole 1 (I) & Pole 2 (J) by M5*15 Bolt (AA) and M5 Washer (BB).

Fig.4: Attach Arch bar 2 (G) to Pole 1 (I) & Pole 2 (J) by M5*15 Bolt (AA) and M5 Washer (BB).

Hardware Pack 2

 


 
 
GG	M5*15 Bolt	16 PCS	
DD	Φ6*180 Peg	16 PCS	
BB	M5 Washer	24PCS	
CC	M5*35 Bolt	4 PCS	
EE	M5 Nut	4 PCS	

Fig.5: Insert Side top connector 2 (C2) to Big top connector (A2) and attach Hook (B2) to Big top connector (A2).

Fig.6: Insert Side pole 1 (D) and Side pole 2(E) into Side top connector 2 (C2).

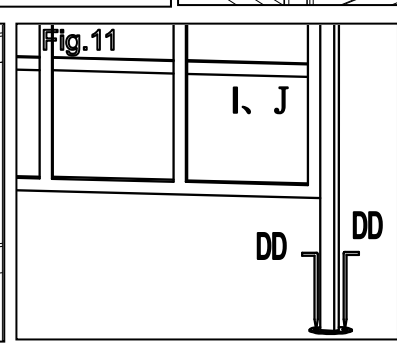
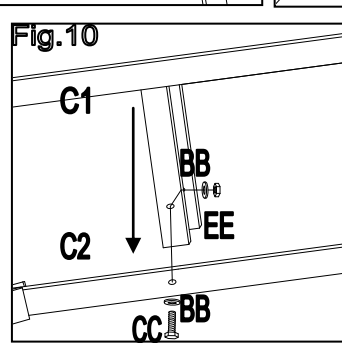
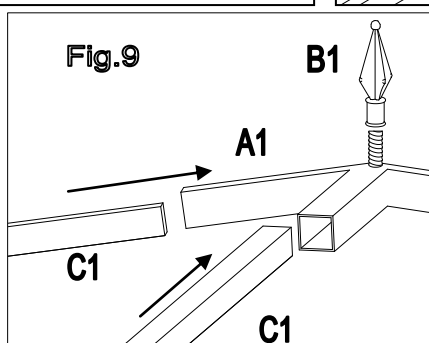
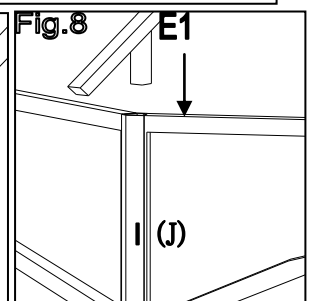
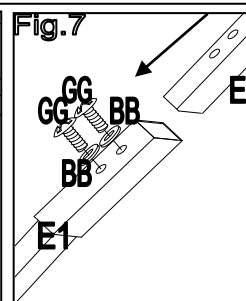
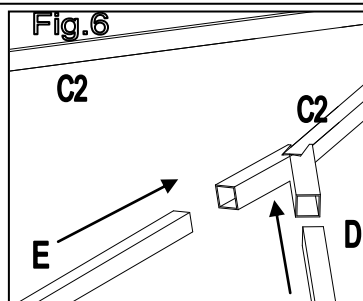
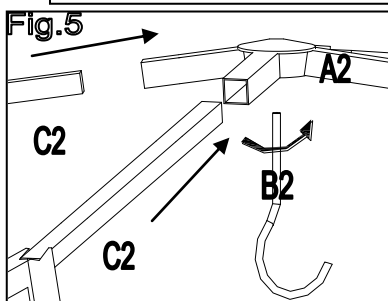
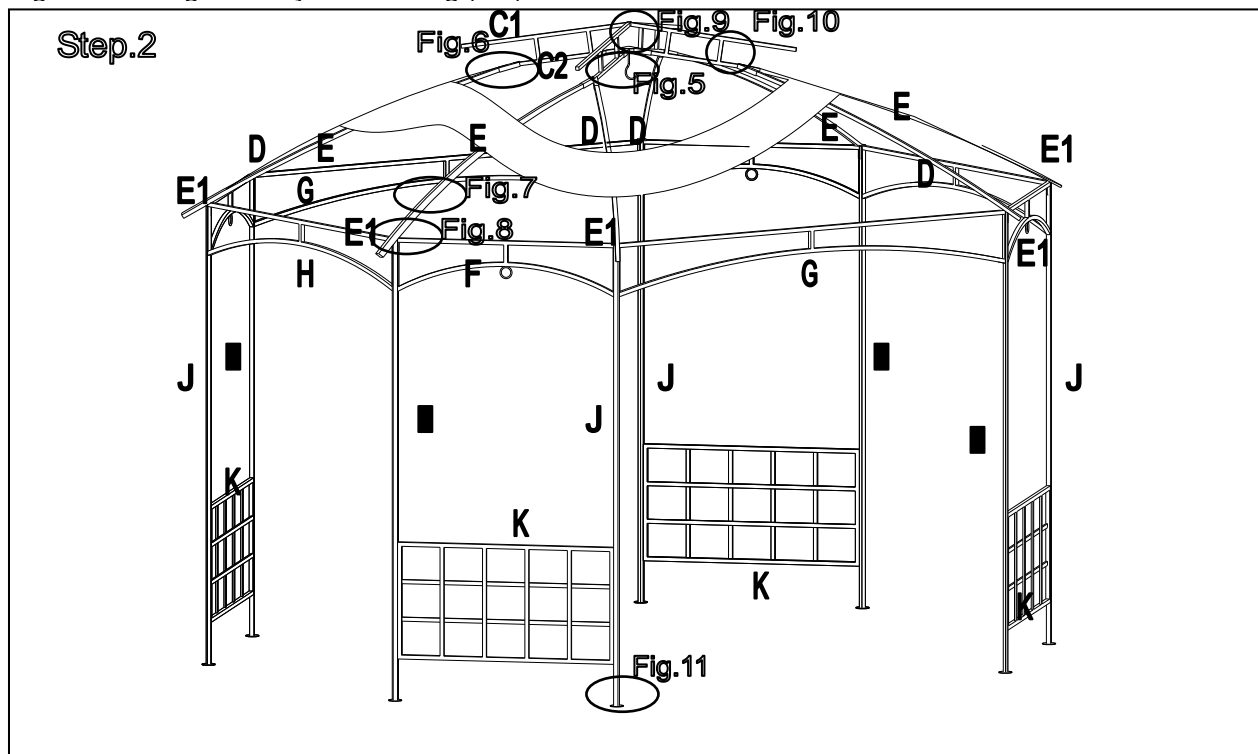
Fig.7: Insert Short side pole 2 (E) into Corner connector (E1), then connect Side pole Short side pole 2 (E) into Corner connector (E1) by M5*15 Bolt (GG) and M5 Washer (BB). Insert Long side pole 1 (D) into Corner connector (E1), then connect Long side pole 1 (D) and Corner connector (E1) by M5*15 Bolt (GG) and M5 Washer (BB).

Fig.8: Insert Corner connector (E1) to the other end of Pole 1 (I) & Pole 2 (J). Cover Large canopy (M) to the Big top. (Note: The bigger corner of big top connector (A2) should point to the larger arch bar 3(H)).

Fig.9: Insert Side top connector 1 (C1) into Small top connector (A1), cover Small canopy (L) to the small top, do not spread. Then attach Finial (B1) to Small top connector (A1).

Fig.10: Connect Side top connector 1(C1) and Side top connector 2(C2) by M5*35 Bolt (CC), M5 Washer (BB) and M5 Nut (EE). Spread Small canopy (L). Lay out Large canopy (M).

Fig.11: Fix the gazebo by $\Phi 6 \times 180$ Peg (DD).



Hardware Pack 3

FF

Plastic tie

48 PCS



Step.3

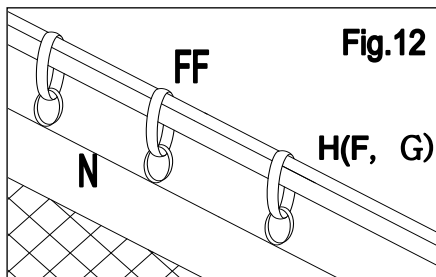
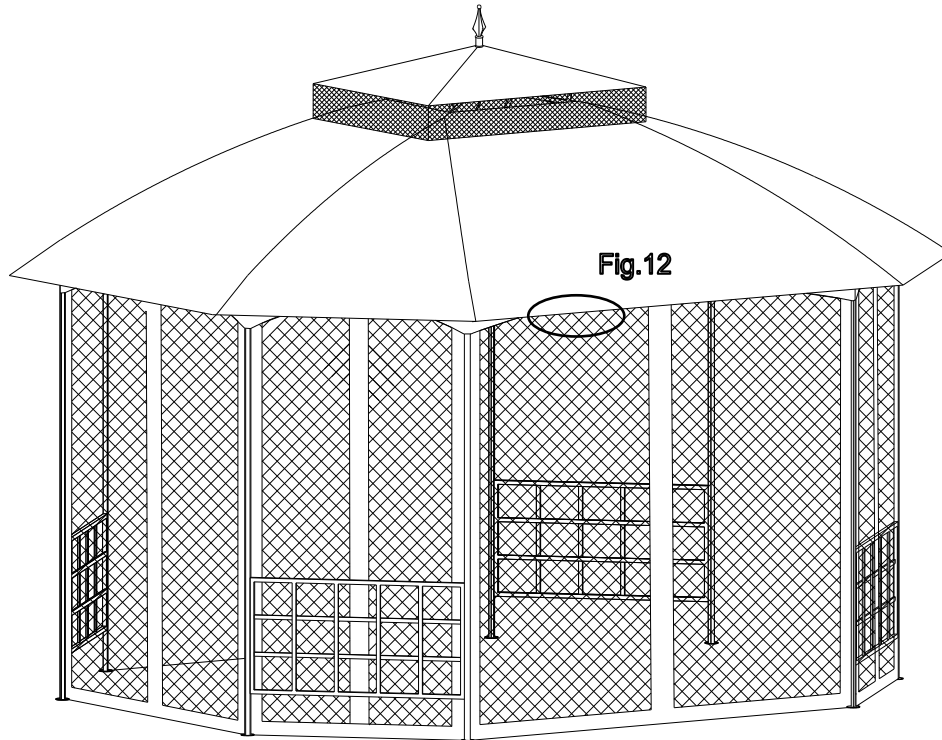


Fig.12: Hanging the Mosquito netting (N) to Arch bar H (F, G) by Plastic tie (FF).

USE & CARE

1. This Gazebo is not a permanent structure and should be disassembled & stored away after use.
2. Do not repack your gazebo until completely dry.
3. This Gazebo must be assembled by two adults or more.
4. This Gazebo must not be left erect in windy conditions.

WARNINGS

1. Assembly Instructions must be followed.
2. Pegs supplied must be used to hold this gazebo in place when upright.
3. Warranty does not cover damage due to extreme weather conditions.

Limited Warranty:

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes.

The item is warranted to be free from defects in material or workmanship for a period of **one (1) year**. We don't reimburse for transportation or delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Exclusions:

Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.

Maintenance:

Our iron/steel components for garden accessories and patio items are coated with rust inhibiting paint that protects it from rusting. However, due to the nature of iron, surface oxidation (rusting) will occur once these protective coatings are scratched. This is a natural process and is not a defect! To minimize this condition, we recommend care when assembling & handling the product to prevent scratching the paint. Should any scratching or damage occur, we recommend immediate touch-up with rust inhibiting paint. Surface rust can also be easily removed with a very light application of common cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping on to deck or patio and cause damaging stains, which may be difficult to remove. This can be prevented if measure is taken to keep the product from oxidizing.

Important: For technical assistance on assembly or replacement parts. Please call Sunjoy Industries at 1(866) 578-6569 from 8:30 AM to 5:30 PM EST Monday to Friday or fax the replacement part form which is in the box to (740)-283-3549 or Email customer.care@sunjoydirect.com for assistance.

Made in China